


Parameters

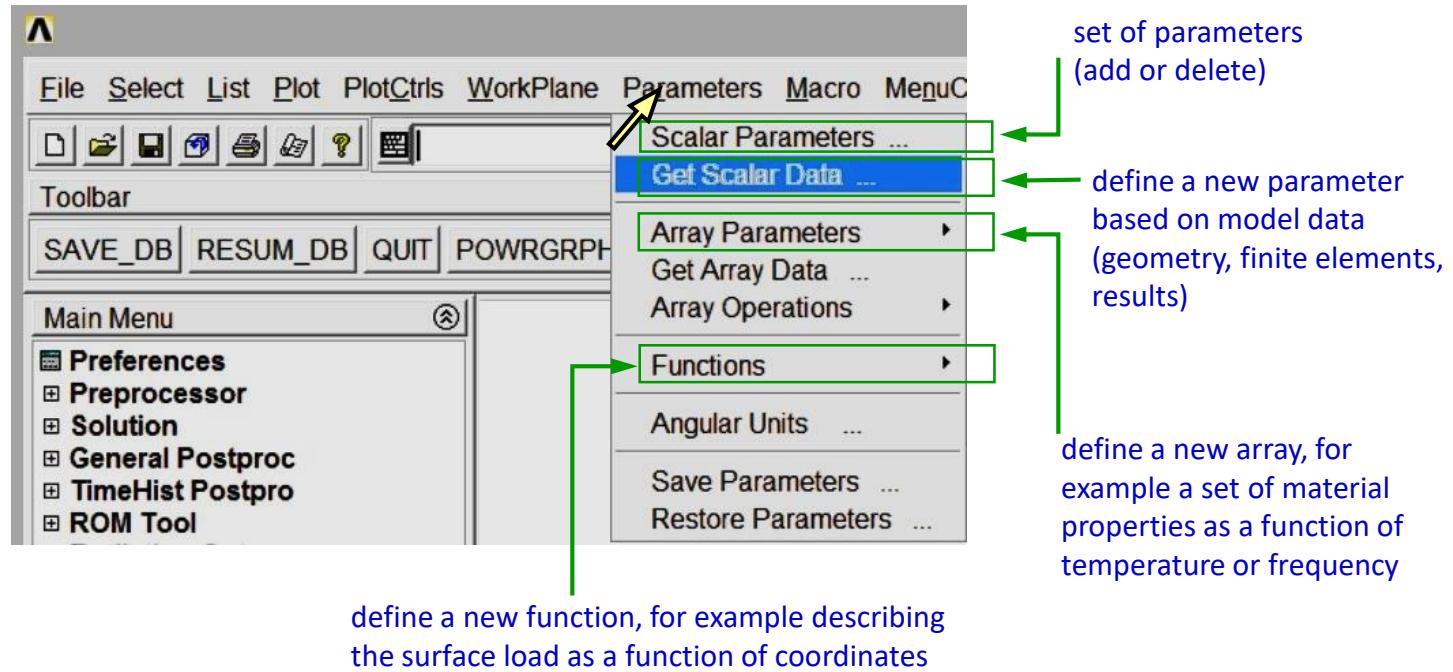

Comments

Parameters are used mainly if the FE model is saved as a text file written in Ansys Parametric Design Language (APLD) . The scope of this menu is very wide.

Exercise 6.

2

Clear and start a new database

Utility Menu > File > Clear & Start New > Do not Read File > OK > CLEAR ... EXECUTED? > Yes
Utility Menu > Plot > Replot

Create a rectangle

Main Menu > Preprocessor > Modeling > Create > Areas >
Rectangle > By Dimensions
 $X_1, X_2 \rightarrow 0, 20$
 $Y_1, Y_2 \rightarrow 0, 10 \rightarrow \text{OK}$ (Fig. 1)



Fig. 1

Get the highest keypoint number

Utility Menu > Parameters > Get Scalar Data ... > Model Data > For selected set → OK (Fig 2)
Current KP set > Highest KP num > K → OK (Fig. 3)

Check parameters

Utility Menu > Parameters
> Scalar Parameters (Fig. 4)

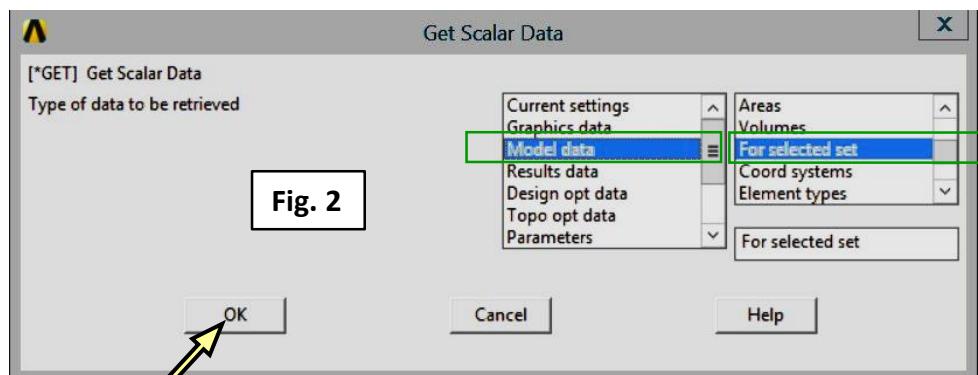


Fig. 2

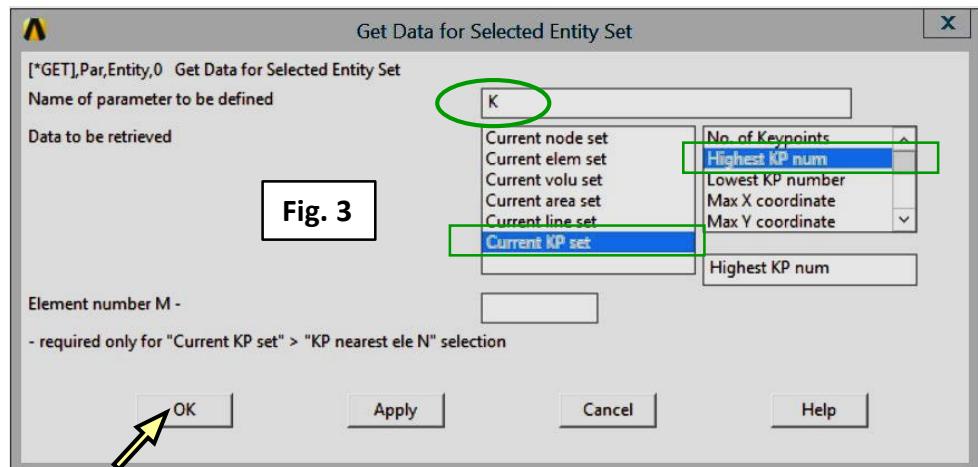


Fig. 3

Comment

If the model is changed (for example, a second rectangle is created), the K value will not be updated. $K = 4$ (4th keypoint).

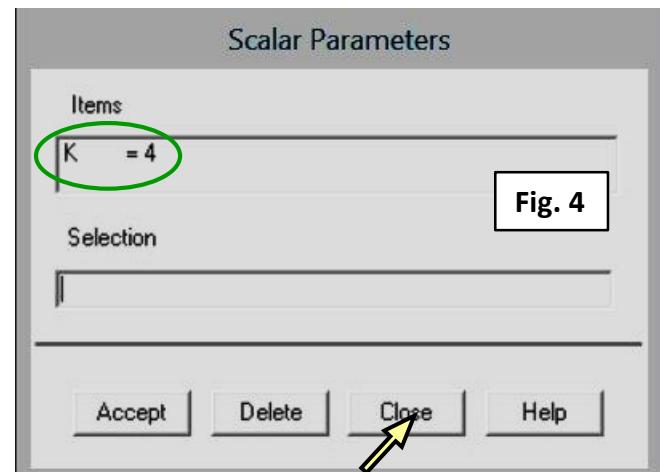


Fig. 4